



HOLZKERN


SKYLINE

38 MM

Minute | Minute

Hour | Stunde

Second | Sekunde

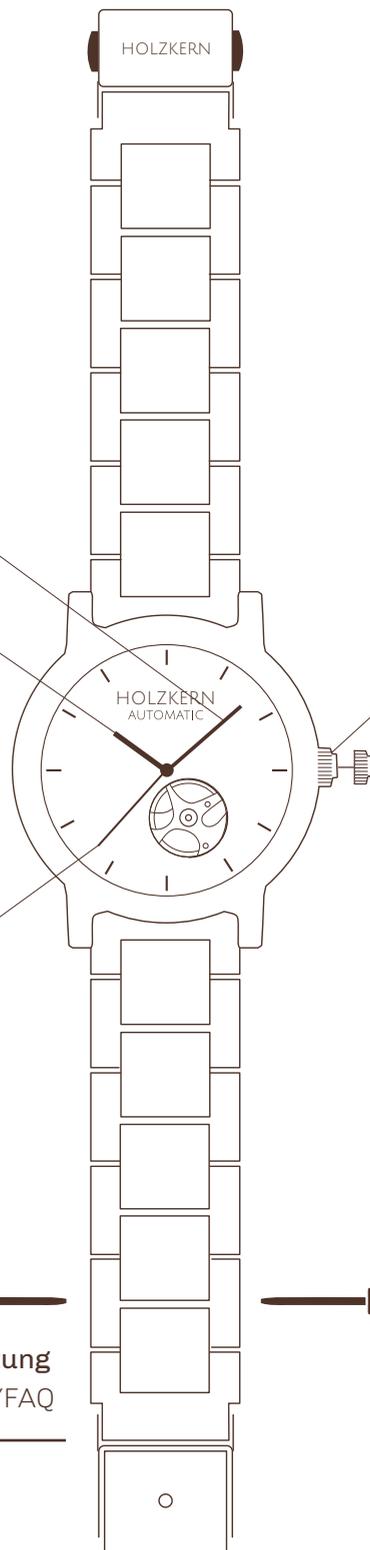

Normal position
Normalposition

1st click: time setting
1 Pos.: Zeiteinstellung

Instructions | Anleitung
www.holzkern.com/FAQ

Winding the watch

Wind the movement by turning the crown clockwise 40 times prior to wearing it. The movement will also wind automatically through regular use; however, after many hours with-out being worn it may be necessary to wind the movement again.

Uhr aufziehen

Drehe die Krone 40 Mal im Uhrzeigersinn, bevor du deine Uhr zum ersten Mal anlegst und sie beginnt zu ticken.

Das Uhrwerk zieht sich nun durch deine Bewegung selbstständig auf. Sollte die Uhr mehr als 40 Stunden nicht getragen werden, wiederhole den Vorgang.

Movement | Uhrwerk

Automatic | Automatik
Citizen-Miyota 6T28

Case thickness | Gehäusehöhe

11 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

102 g

Glass | Glas

Sapphire Crystal | Saphirglas

Backplate | Rückseite Gehäuse

Metal, glass | Metall, Glas

Water resistance | Wasserdicht

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

18 mm

Band | Armband

Wood, metal | Holz, Metall
Screws | Schrauben



Accuracy / Day
Genauigkeit / Tag

±20-40 sec.
±20-40 Sek.



Running time
Laufzeit

42 Hours
42 Stunden